


# X-10 Satellite Module Local Control Disabling Procedure

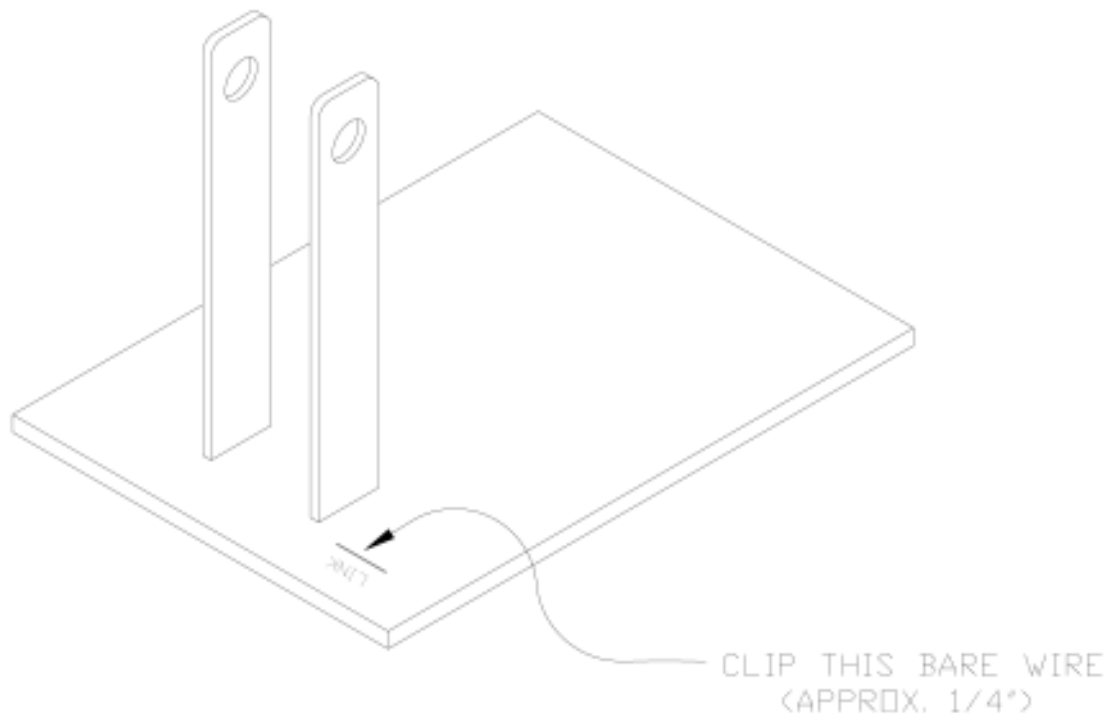

## INSTRUCTIONS:

1. Remove the (1) screw from the back of the module.
2. Place the FRONT of the module in your palm, rotating to place the male prongs toward you, pointed UP. Carefully separate the two halves of the plastic case. The (2) address wheels will be loose inside the front half.
3. Set the FRONT half of the module down.
4. Carefully slide the rear half of the case from the printed circuit board.
5. Orient the board with the prongs facing UP and TOWARD you as shown above.
6. Look in the lower right corner for a bare wire, approx. 1/4" long. Clip this wire. A sharp pair of fingernail clippers will work.
7. Reassemble the satellite module.